


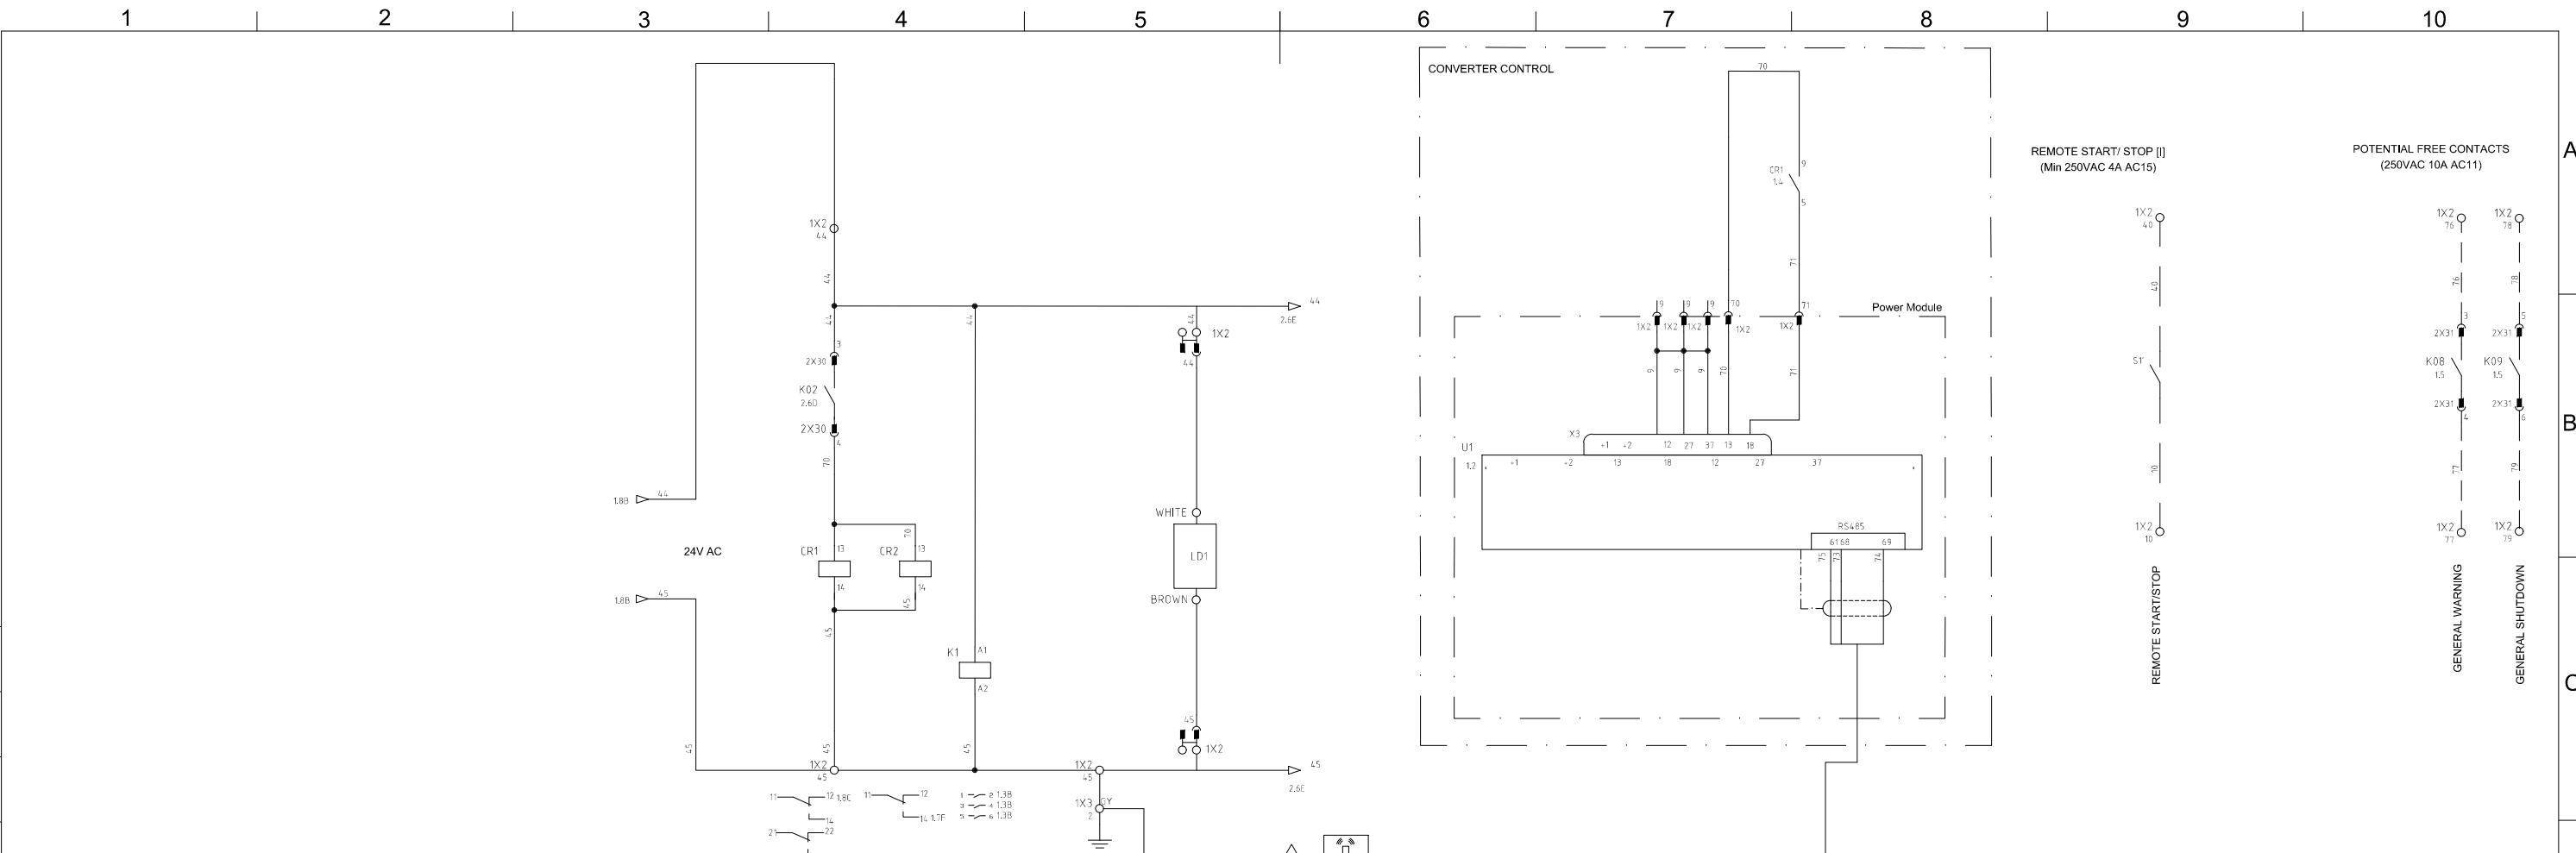

LEGENDS:

LOCATION	TAGNAME	DESCRIPTION	FUNCTION
CONTROL PANEL	T3	TRANSFORMER	CONTROL CIRCUIT 24V
CONTROL PANEL	CR1	CONTROL RELAY	OVERLOAD TRIP MAIN MOTOR M1 TEMP.
CONTROL PANEL	CR2	CONTROL RELAY	LIQUID SOLENOID VALVE
CONTROL PANEL	QF8	BREAKER	CONTROL CIRCUIT 24V
CANOPY	QF4	BREAKER	CONTROL CIRCUIT 24V
CANOPY	ES	EMERGENCY STOP	
CANOPY	K25	PHASE SEQUENCE RELAY	PROTECTION
CONTROL PANEL	PT20	PRESSURE SENSOR	
CONTROL PANEL	PT21	PRESSURE SENSOR	
CONTROL PANEL	TT89	TEMPERATURE SENSOR	
CONTROL PANEL	TT90	TEMPERATURE SENSOR	
CONTROL PANEL	TT91	TEMPERATURE SENSOR	
CONTROL PANEL	TT92	TEMPERATURE SENSOR	
CONTROL PANEL	E1	CONTROLLER	MKSS
CONTROL PANEL	S1'	SWITCH	REMOTE START/STOP
CONTROL PANEL	LD1	DRAIN	
CONTROL PANEL	S2	HIGH PRESSURE SWITCH	
CONTROL PANEL	1X2	CONNECTOR	
CONTROL PANEL	1X3	CONNECTOR	

