

NSS 3000 MRK

Maintenance Kit Installation Guide



1

Before starting assembly, please check contents are as follows:

- 2 filter (remove from plastic bag)
- 2 White prefilter bag
- - metal retaining springs
| 4 x 400 mm

Service interval kit containing:

- printed card
- self-adhesive time strip

Service indicator - assembly and attachment



i Insert the boss on the reverse of the mount **(c)** into the pre-drilled hole in the separator lid.

ii Peel backing from time strip **(a)** and attach to the plastic card **(b)** within the dotted lines.

iii Flex the card, passing the ends through the slots on the top

surface of the mount. **To activate**, press firmly on the time strip label at the point indicated.

After a few minutes, a red line will appear, to indicate 'time in service' up to 12 months.

A replacement card and time strip will be supplied with each service kit.

General installation notes

- Please ensure a steady fall in the pipe run from the outlet point to the sanitary drain.
- When used in conjunction with timed solenoid drain, set drain "open" duration to minimum setting (1-2 seconds).
- When used in conjunction with motorized ball valve or high capacity drain (ie Drain-all®) a de-pressurisation chamber must be installed between drain and NSS unit.
- Never discharge condensate to a storm drain or to surface water; always connect to a sanitary drain or sewer.
- Remember that it's the user's responsibility to check with the local authority as to the permissible discharges in their area.

Testing quality


Replace filters before outlet cloudiness exceeds the ppm limit for your region.

Test outlet quality weekly using kit provided.



NSS 3000 MRK

Installation guide

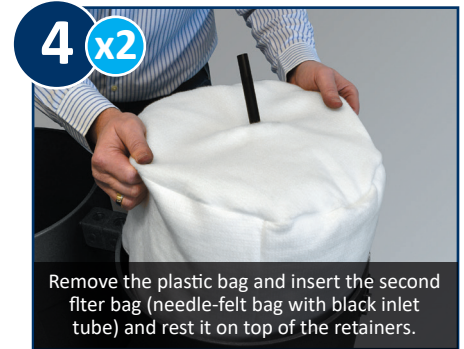

nano

Address: 5509 David Cox Road
Charlotte NC 28269, USA
Tel: 704.897.2182
Fax: 704.897.2183
Internet: www.nano-purification.com
E-mail: support@nano-purification.com

Address: Dukeway
Team Valley Trading Estate, Gateshead
NE11 0PZ, United Kingdom
Tel: +44 (0) 191 497 7700
Internet: www.nano-purification.com
E-mail: sales_uk@nano-purification.com