



## nano F<sup>1.1</sup>: Compressed Air & Gas Filtration

# GMVB 0325

## 63.0 Nm<sup>3</sup>/h Medical Vacuum Filter

nano GMVB medical vacuum filters are essential to avoiding damage to vacuum pumps and preventing potentially hazardous biological contagions from being exhausted into the surrounding environment. Designed for use in critical medical applications to remove solid, liquid, and bacterial contamination in vacuum systems, the nano GMVB filters provide a safe and reliable product that is used in hospitals, operating rooms, intensive care units, laboratories, veterinary hospitals, dental offices, and medical vacuum plant installations worldwide.


GENERAL CHARACTERISTICS	
Free air aspirated (Nm <sup>3</sup> /h)	63.0
Rarified air flow (Nm <sup>3</sup> /h)	166.5
OPERATING LIMITS	
Design operating pressure range (barg)	FV to 0.5
Design operating temperature range (°C)	1.7 to 60
HOUSING CONSTRUCTION	
Materials	pressure die cast aluminium
Finish	E-Coat™ surface treatment (internal & external) powder paint (external)
ELEMENT CONSTRUCTION	
Media	borosilicate glass microfiber
Replacement element (part no.)	GE 0325 MV
COMPONENTS	
Manual drain (part no.)	GFMDKB 1500
Sterilisable glass drain flask (part no.)	MLF 250
Differential pressure indicator / gauge	guage
DP (part no.)	GVDP 1500
AIR CIRCUIT	
Air circuit connections (BSPP)	1 ½"

(1) Flows at an operating vacuum (suction) of 475 mmHg (0.63 bara). Rated flows are stated at HTM 02-01 conditions. Operating vacuum (suction) pressure is stated at the filter outlet.



### Dimensions & Weight

DIMENSIONS AND WEIGHT	
A (mm)	140
B (mm)	40
C (mm) *	475
D (mm)	30
E (mm)	587
Weight (kg)	2.99

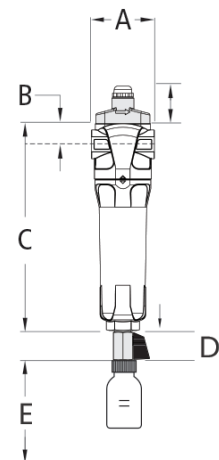

\*DP indicator adds 71mm to height

### Features

#### HOUSING FEATURES

- Designed in accordance with CE PED pressure vessel standards.
- “Dead Stop” bowl feature provides full closure without over tightening.
- 10 year housing warranty
- Easily removable sterilisable drain flask and differential pressure monitor supplied as standard.
- Unique design provides maximum filtration performance while minimising pressure losses for optimum energy efficiency.

#### ELEMENT FEATURES

- Meets ISO 7396-1, HTM 02-01 and 2018 revision of NFPA 99 (5.1.3.7.4).
- Designed to eliminate solid, liquid and bacterial contamination from medical vacuum systems.

# nano F<sup>1.1</sup>: Medical Vacuum Filters

ELEMENT GRADES	MV
Particle removal (microns) <sup>(1)</sup>	> 99.9999% (HTM 02-01 specifies > 99.995%)
Design operating temperature range (°C)	1.7 to 60
Pressure drop - clean (mbar)	39
Maximum element life	6 months or 1000 hours

(1) Accordance with BS 3928:1969. Fully validated to ISO 7396-1, AS 2896 and NFPA 99.

## Accessories

WALL MOUNTING KITS	FITS	PART NUMBER
Wall mounting kit	GMVB 0025	GFMK 0325



Technical specifications subject to change without notice.  
Publication Reference: GMVB0325-UK-EN-Version-000  
©2024 Air & Gas Solutions LLC

**nano**  
Experience. Customer. Service.

nano-purification solutions  
www.nano-purification.com

United Kingdom  
Gateshead, United Kingdom  
Phone: +44 (0) 191 497 7700  
Email: sales\_uk@nano-purification.com

United States | Canada | United Kingdom | Germany | Singapore